


Catalog of


REPLACEMENT PARTS

KitchenAid

BUILT-IN SELF-CLEAN ELECTRIC OVENS

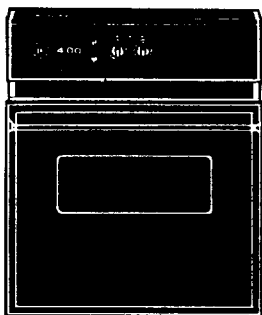

IMPERIAL

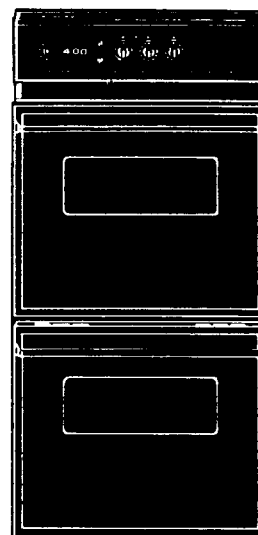


24" SINGLE — KESO-140S
27" SINGLE — KESO-170S


ML-42014
ML-42015

24" DOUBLE — KEDO-240SE
27" DOUBLE — KEDO-270SE

ML-42018
ML-42019

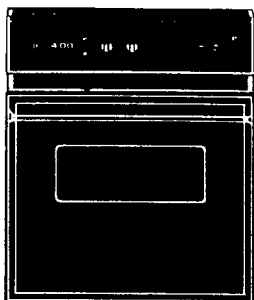

SUPERBA

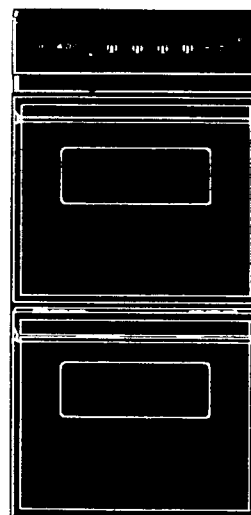


24" SINGLE — KESO-145S
27" SINGLE — KESO-175S

ML-42016
ML-42017

24" DOUBLE — KEDO-245SS
27" DOUBLE — KEDO-275SS

ML-42020
ML-42021

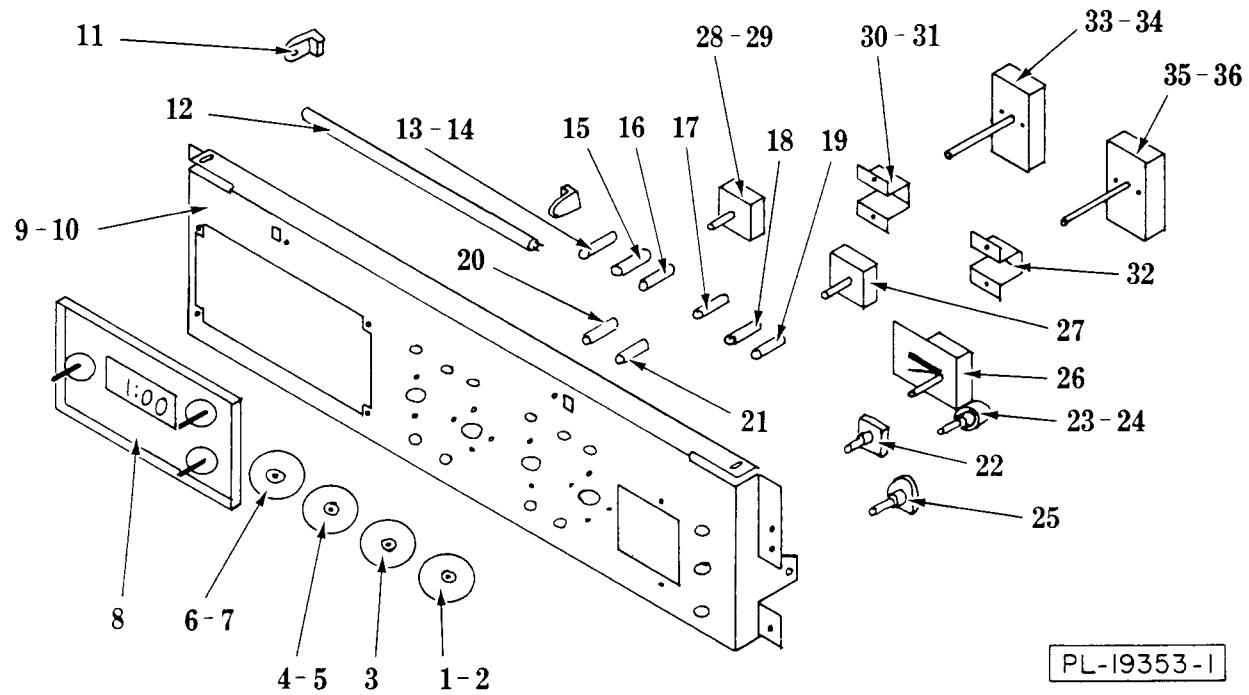


CONTROLS

1	305074-2	Thermostat Disc, Lower Oven KEDO-240/270
2	305074-5	Thermostat Disc, Lower Oven KEDO-245/275
3	305073-4	Selector Disc, Lower Oven KEDO-245/275
4	305074-3	Thermostat Disc, Single or Upper Oven KESO-140/170, KEDO-240/270
5	305074-5	Thermostat Disc, Single or Upper Oven KESO-145/175, KEDO-245/275
6	305073-4	Selector Disc, Single or Upper Oven KESO-140/170, KEDO-240/270
7	305073-5	Selector Disc, Single or Upper Oven KESO-145/175, KEDO-245/275
8	305003	Clock
9	305019-1	Control Mounting Panel KESO-140/145 KEDO-240/245
10	CC-32856	Control Mounting Panel KESO-170/175 KEDO-270/275
11	CC-566049	Lamp Socket KESO-145/175, KEDO-245/275
12	BL-4-34	Lamp, 8 W Fluorescent KESO-145/175, KEDO-245/275
13	CC-71212	Indicator Light, Oven (Single or Upper Oven) KESO-140/170, KEDO-240/270
14	CC-71214	Indicator Light, Oven (Single or Upper Oven) KESO-145/175, KEDO-245/275
15	CC-71212	Indicator Light, Clean (Single or Upper Oven)
16	CC-71212	Indicator Light, Lock (Single or Upper Oven)
17	CC-71214	Indicator Light, Oven (Lower Oven)
18	CC-71212	Indicator Light, Clean (Lower Oven) KEDO-245/275
19	CC-71212	Indicator Light, Lock (Lower Oven) KEDO-245/275
20	CC-71213	Indicator Light, Retained Heat KESO-145/175, KEDO-245/275
21	CC-71213	Indicator Light, Service KESO-145/175, KEDO-245/275
22	CC-71009	Retained Heat Switch KESO-145/175, KEDO-245/275
23	CC-11262	Panel Light Switch KESO-145/175, KEDO-245/275
24	CC-14058	Oven Light Switch KESO-140/170, KEDO-240/270
25	CC-14058	Oven Light Switch KESO-145/175, KEDO-245/275
26	305004	Meat Probe Indicator KESO-145/175, KEDO-245/275
27	CC-70723	Selector Switch, Lower Oven KEDO-245/275
28	CC-70723	Selector Switch, Single or Upper Oven KESO-140/170, KEDO-240/270
29	CC-305001	Selector Switch, Single or Upper Oven KESO-145/175, KEDO-245/275
30	CC-70835	Thermostat Mounting Bracket KESO-140/170, KEDO-240/270
31	CC-31951	Thermostat Mounting Bracket KESO-145/175, KEDO-245/275
32	CC-31951	Thermostat Mounting Bracket, Lower Oven KEDO-245/275
33	CC-32473	Thermostat, Single or Upper Oven KESO-140/170, KEDO-240/270
34	CC-32471	Thermostat, Single or Upper Oven KESO-145/175, KEDO-245/275
35	305250	Thermostat, Lower Oven KEDO-240/270
36	CC-32472	Thermostat, Lower Oven KEDO-245/275
	*CC-71201	Wire Harness, Element, Single or Upper Oven
	*CC-71202	Wire Harness, Element, Lower Oven KEDO-245/275
	*CC-71244	Wire Harness, RT Thermostat KESO-145/175, KEDO-245/275
	*305125	Wire Harness, RT Thermostat KESO-140/170, KEDO-240/270

*305200

Wire Harness, Probe Jack KESO-145/175, KEDO-
245/275


*Part Not Illustrated.

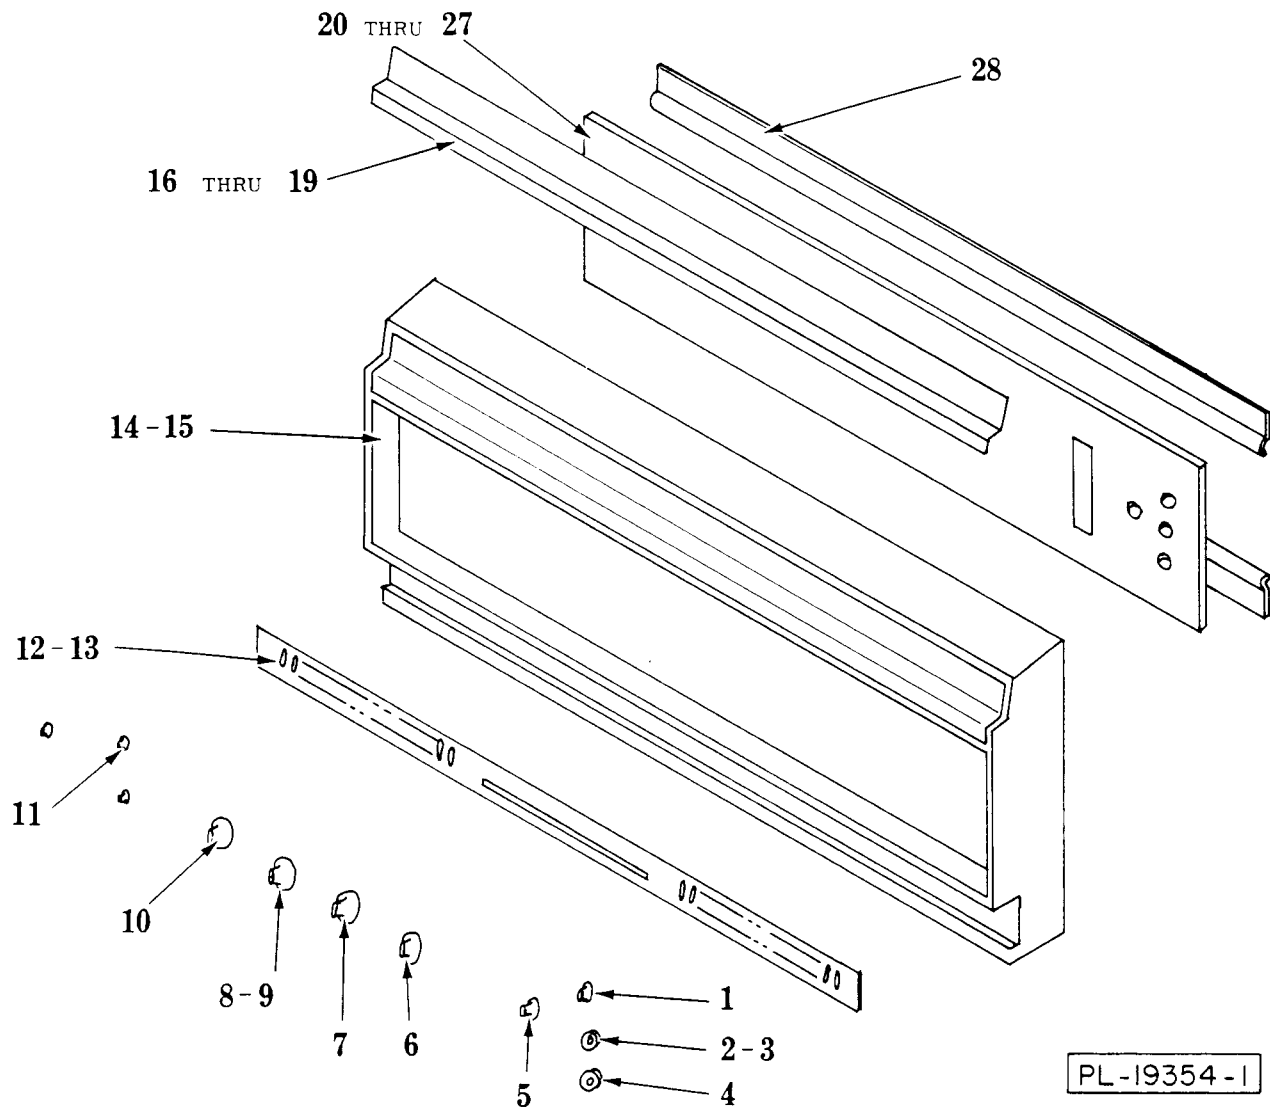

CONTROL FRAME

1	305106-1	Knob, Retained Heat Switch KESO-145/175, KEDO-245/275
2	305100	Bezel, Panel Light Switch KESO-145/175, KEDO-245/275
3	305100	Bezel, Oven Light Switch KESO-140/170, KEDO-240/270
4	305100	Bezel, Oven Light Switch KESO-145/175, KEDO-245/275
5	305106-1	Knob, Meat Probe Indicator KESO-145/175, KEDO-245/275
6	CC-70443	Knob - Thermostat, Lower Oven KEDO-240/245, KEDO-270/275
7	CC-70443	Knob, Selector Switch, Lower Oven KEDO-245/275
8	CC-71333	Knob, Thermostat, Single or Upper Oven KESO-140/170, KEDO-240/270
9	CC-70443	Knob, Thermostat, Single or Upper Oven KESO-145/175, KEDO-245/275
10	CC-70443	Knob - Selector Switch, Single or Upper Oven
11	CC-600307	Knob, Clock
12	CC-540427	Vent Insert KESO-140/145, KEDO-240/245
13	CC-540426	Vent Insert KESO-170/175, KEDO-270/275
14	CC-71350	Control Frame KESO-140/145, KEDO-240/245
15	CC-71351	Control Frame KESO-170/175, KEDO-270/275
16	305012-3	Top Insert KESO-140/240
17	305012-1	Top Insert KESO-145/245
18	305012-4	Top Insert KESO-170/270
19	305012-2	Top Insert KESO-175/275
20	305136	Control Panel Glass KESO-140
21	305137	Control Panel Glass KESO-145
22	305140	Control Panel Glass KESO-170
23	305141	Control Panel Glass KESO-175
24	305138	Control Panel Glass KEDO-240
25	305139	Control Panel Glass KEDO-245
26	305142	Control Panel Glass KEDO-270
27	305143	Control Panel Glass KEDO-275
28	CC-22040	Retainer
	*SD-35-94	Screw - #8-18 x 3/8" HWHTCS
	*NS-44-7	Nut - #8-32 Hex
	*CC-600090	Tinnerman, "J" 8A

*Part Not Illustrated.

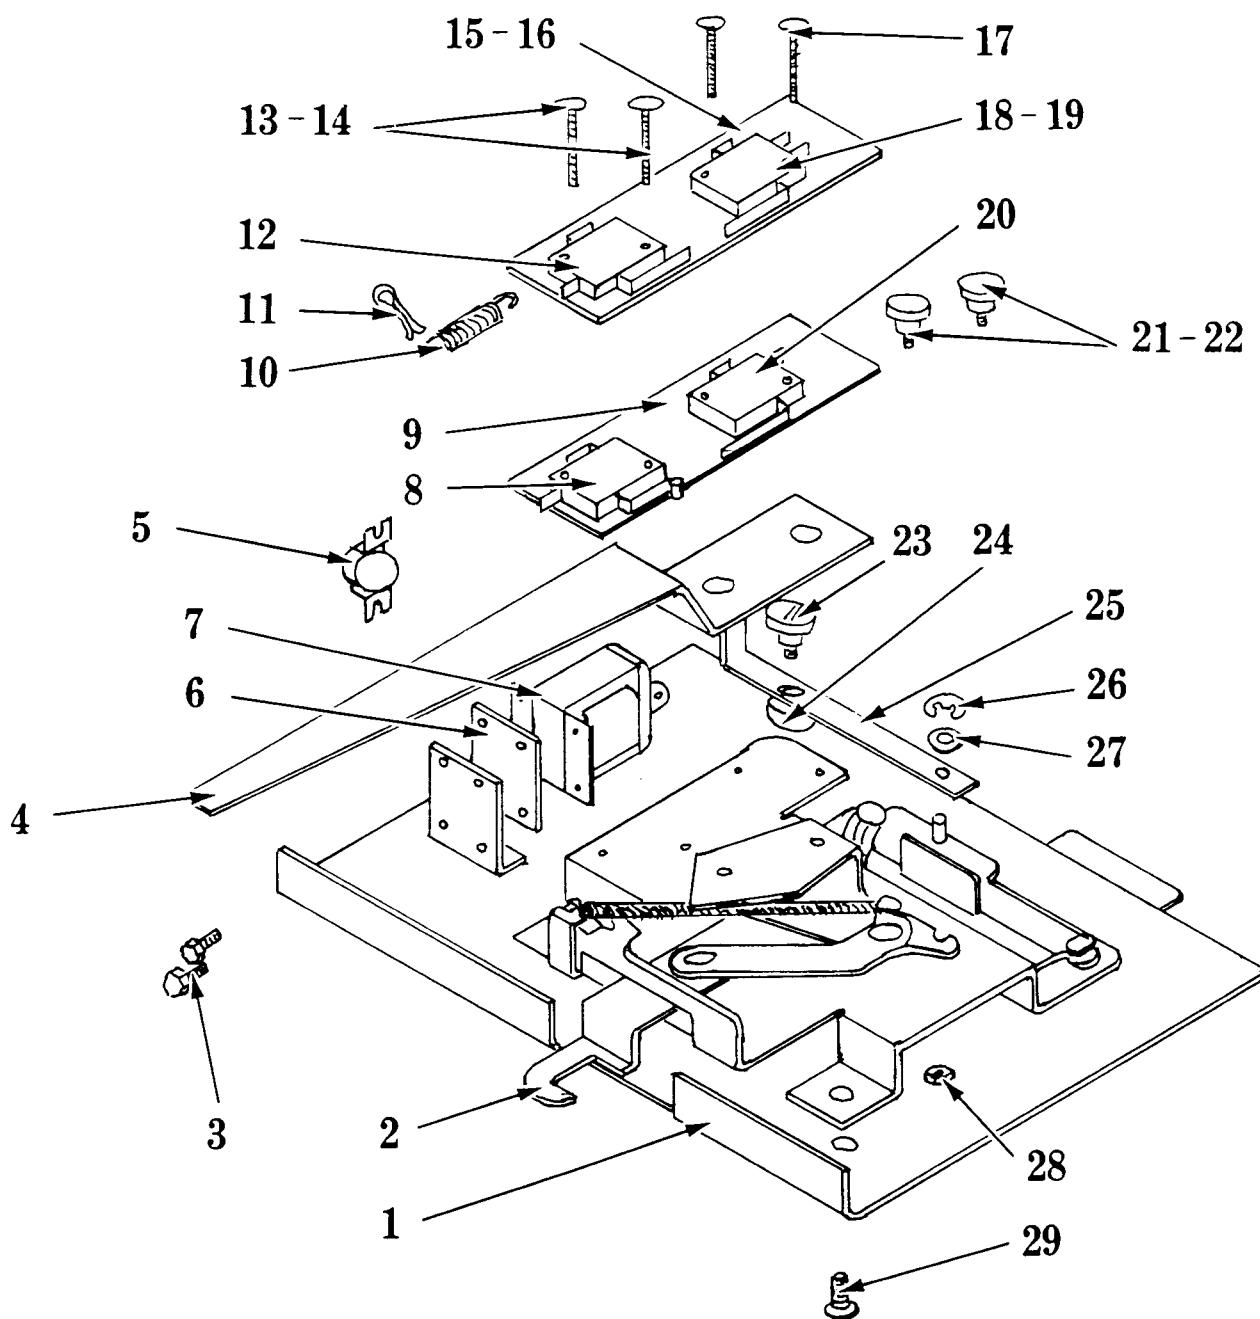


PL-19356-1

LATCH ASSEMBLY

1	305378	Latch Mounting Plate
2	CC-71022	Latch Mechanism
3	SA-21-21	Screw #10-24 x 3/8" Hex TCS
4	305105-1	Latch Lever
5	305154-1	Thermal Switch
6	CC-31976	Solenoid Spacer
7	CC-70992	Solenoid
8	CC-70980	Latch Switch with Roller
9	CC-70991	Insulator
10	CC-71072	Solenoid Spring
11	PC-6-25	Cotter Pin
12	CC-70982	Latch Switch, Normally Closed KEDO-245/275
13	SC-81-2	Screw - #4-40 x 1-1/8" RHMS - Slotted KEDO-245/275
14	SC-18-39	Screw - #4-40 x 9/16" RHMS - Slotted KESO-140/145, KESO-170/175
15	305016	Insulator KESO-140/145, KESO-170/175, KEDO-240/270
16	CC-70991	Insulator KEDO-245/275
17	SC-81-2	Screw - #4-40 x 1-1/8" RHMS - Slotted
18	CC-70981	Latch Switch, Normally Open KESO-140/170, KEDO-240/270, Lower Oven KEDO-245/275
19	CC-70983	Latch Switch, SPDT KESO-145/175 Upper Oven KEDO-245/275
20	CC-70981	Latch Switch, Normally Open
21	CC-71167	Shoulder Screw, Latch Lever KESO-140/145, KESO-170, KESO-175 Upper Oven KEDO-245/275
22	CC-71166	Shoulder Screw, Latch Lever Lower Oven KEDO-245/275
23	CC-71059	Shoulder Screw, Actuator Arm
24	CC-71058	Spacer, Actuator Arm
25	CC-31725	Actuator Arm
26	RR-6-3	Retaining Ring
27	WS-29-83	Washer, Flat
28	NS-44-9	Nut - #10-24 Hex Kep
29	SC-71-11	Screw - #10-24 x 3/8" PTHMS
	*CC-71164	Spacer, Latch Lever Lower Oven KEDO-245/275
	*CC-71588	Wire Harness, Latch Switch KESO-145/175, KEDO-245/275
	*305133	Wire Harness, Latch Switch KESO-140/170, KEDO-240/270
	*305358	Wire Harness, Safety Switch
	*305359	Wire Harness, Safety Switch KEDO-245/275

*Part Not Illustrated.

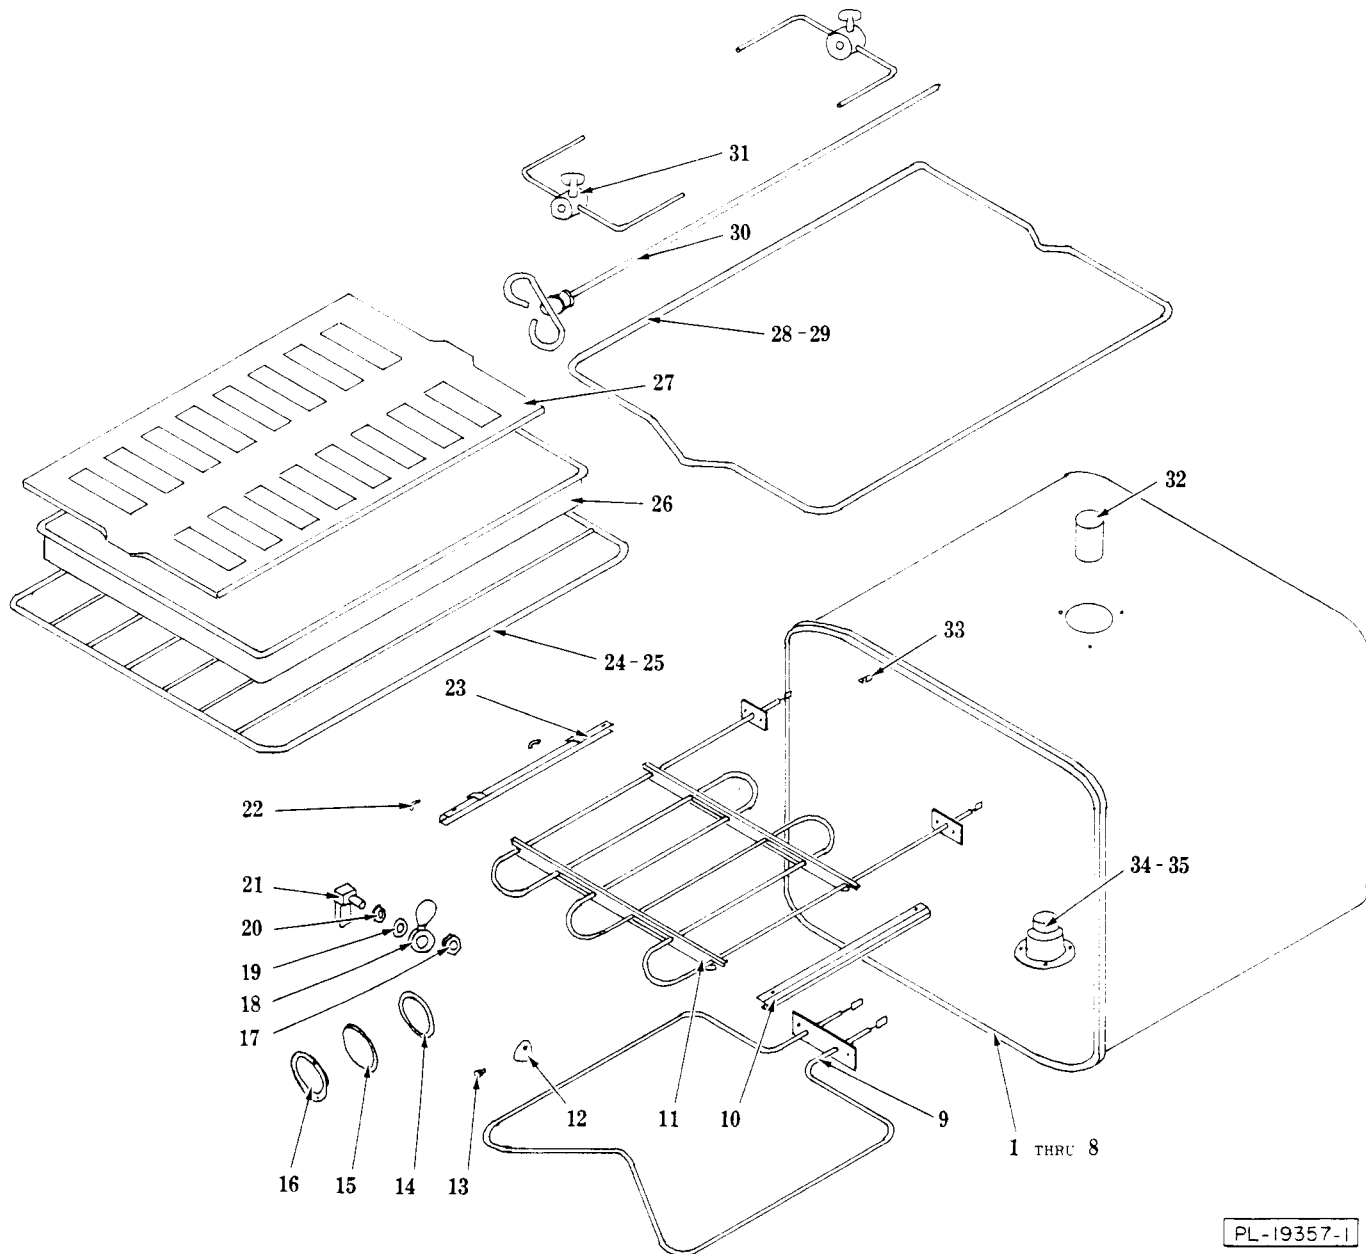


PL-19357-1

OVEN LINER

1	CC-32048	Oven Liner, Single or Upper Oven KESO-140/240
2	CC-32180	Oven Liner, Lower Oven KEDO-240
3	305119-2	Oven Liner, Single or Upper Oven KESO-145, KEDO-245
4	CC-32048	Oven Liner, Lower Oven KEDO-245
5	CC-32050	Oven Liner, Single or Upper Oven KESO-170, KEDO-270
6	CC-32415	Oven Liner, Lower Oven KEDO-270
7	305119-1	Oven Liner, Single or Upper Oven KESO-175, KEDO-275
8	CC-32050	Oven Liner, Lower Oven KEDO-275
9	CC-70845	Bake Element
10	CC-32171	Broiler Element Support - Right
11	CC-32470	Broiler Element
12	CC-19977	Rotisserie Cover KESO-145/175, KEDO-245/275
13	CC-604625	Shoulder Screw KESO-145/175, KEDO-245/275
14	CC-11169	Light Lens Gasket
15	CC-11168	Light Lens
16	CC-31211	Light Lens Retainer
17	CC-13720	Nut, Meat Probe KESO-145/175, KEDO-245/275
18	CC-13688	Probe Jack Cover KESO-145/175, KEDO-245/275
19	WS-17-43	Washer KESO-145/175, KEDO-245/275
20	NS-47-9	Nut, Hex Jam KESO-145/175, KEDO-245/275
21	CC-13692	Meat Probe Jack KESO-145/175, KEDO-245/275
22	CC-6798	Thermostat Bulb Clip
23	CC-32173	Broiler Element Support - Left
24	CC-70431	Oven Rack KESO-140/145, KEDO-240/245
25	CC-70432	Oven Rack KESO-170/175, KEDO-270/275
26	CC-30307	Broiler Pan
27	CC-30325	Broiler Pan Grid
28	CC-70457	Rotisserie Rack KESO-145, KEDO-245
29	CC-70458	Rotisserie Rack KESO-175, KEDO-275
30	CC-30858	Rotisserie Spear KESO-145/175, KEDO-245/275
31	CC-7203	Rotisserie Skewer KESO-145/175, KEDO-245/275
32	CC-31859	Vent Tube Extension
33	CC-32104	Capillary Cover
34	CC-70857	Smoke Eliminator, Single or Upper Oven KESO-140/145/170/175, KEDO-240/245/270/275 Lower Oven KEDO-245/275
35	CC-70856	Vent Tube, Lower Oven KEDO-240/270
	*305289	Gasket, Meat Probe Jack KESO-145/175, KEDO-245/275
	*CC-13691	Meat Probe KESO-145/175, KEDO-245/275


*Part Not Illustrated.

KESO/KEDO SERIES REPLACEMENT PARTS

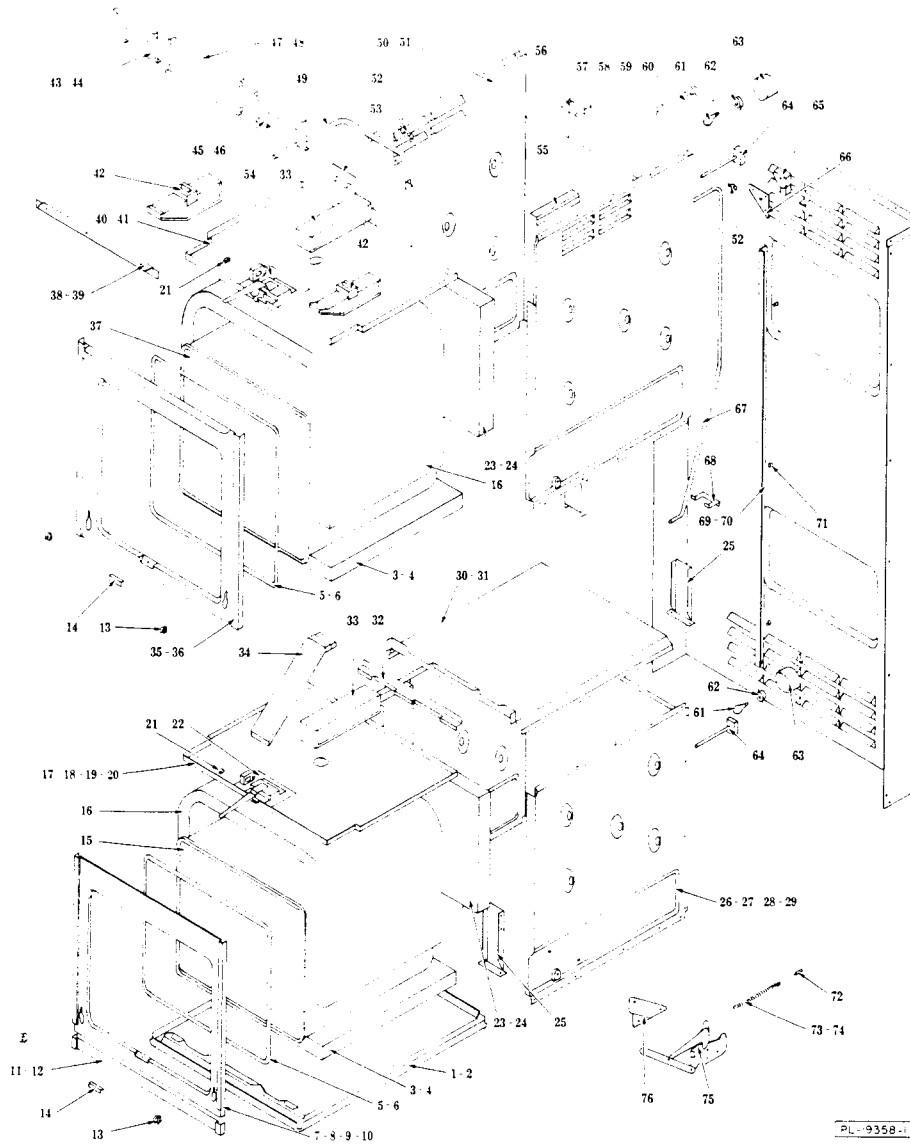

CABINET PARTS

1	305232-1	Sandwich Panel Assembly KESO-140/145
2	305232-4	Sandwich Panel Assembly KESO-170/175
3	305232-2	Sandwich Panel Assembly KEDO-240
4	305232-3	Sandwich Panel Assembly KEDO-245
5	305232-5	Sandwich Panel Assembly KEDO-270
6	305232-6	Sandwich Panel Assembly KEDO-275
7	FE-23-13	Bushing
8	CC-32283	Hole Cover
9	CC-71306	Resistor Block
10	CC-22003	Arm Extension, R.H
11	CC-120172	Ballast
12	CC-411047	Thermal Relay KESO-145/175, KEDO-245/275
13	305005	Relay, Meat Probe KESO-145/175, KEDO-245/275
14	CC-71078	Terminal Block, Distribution
15	CC-9814	Transformer, Meat Probe KESO-145/175, KEDO-245/275
16	CC-32442	Blower Assembly
17	CC-560177	Terminal Block, Power Supply
18	CC-22038	Arm Guide
19	CC-22086	Conduit, 1/2" x 56"
20	CC-22209	Arm Extension, L.H.
21	CC-32289	Cabinet Top, Front KESO-140/145, KEDO-240/245
22	CC-32288	Cabinet Top, Front KESO-170/175, KEDO-270/275
23	CC-32293	Cabinet Top, Rear KESO-140/145, KEDO-240/245
24	CC-32294	Cabinet Top, Rear KESO-170/175, KEDO-270/275

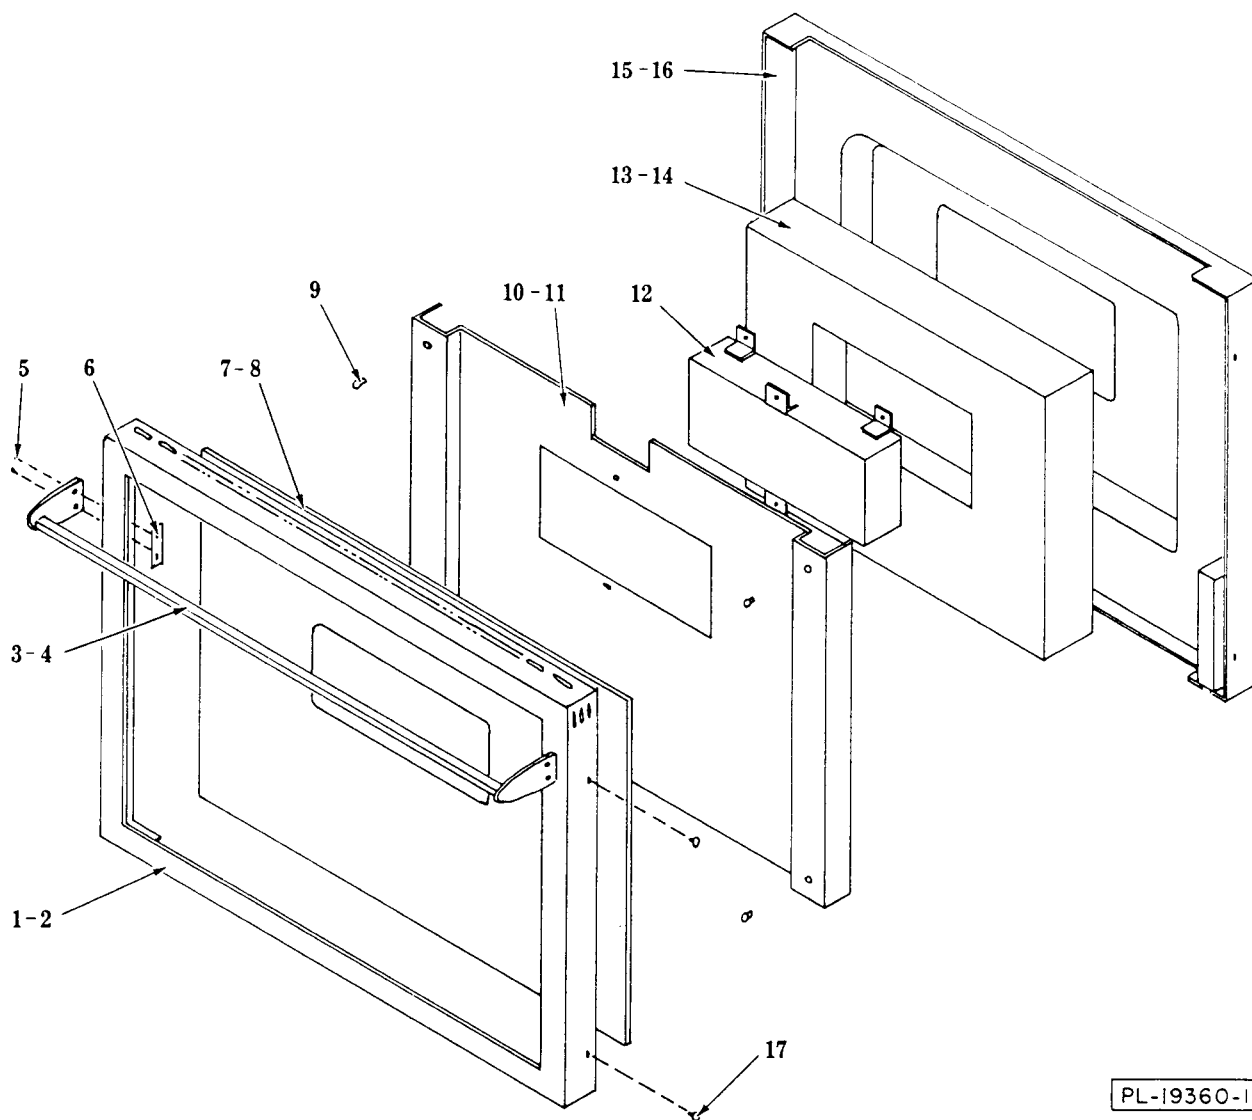


PL-19360-1

DOOR ASSEMBLY
(LOWER EASY CLEAN OVEN)

1	CC-32464	Main Bottom KESO-140/145, KEDO-240/245
2	CC-32465	Main Bottom KESO-170/175 KEDO-270/275
3	CC-889047	Insulation, Bottom KESO-140/145, KEDO-240/245
4	CC-889048	Insulation, Bottom KESO-170/175, KEDO-270/275
5	CC-590060	Door Gasket KESO-140/145, KEDO-240/245
6	CC-590061	Door Gasket KESO-170/175, KEDO-270/275
7	305095-4	Front Frame, Lower Oven KEDO-240
8	305095-2	Front Frame, Lower Oven KEDO-245
9	305095-3	Front Frame, Lower Oven KEDO-270
10	305095-1	Front Frame, Lower Oven KEDO-275
11	CC-31730	Bottom Trim KESO-140/145, KEDO-240/245
12	CC-31731	Bottom Trim KESO-170/175, KEDO-270/275
13	CC-607146	Hinge Arm Guide
14	CC-22036	Cover, Seal End
15		Oven Liner, Lower Oven (See Page 10)
16	CC-889050	Insulation, Top and Sides
17	CC-32192	Compartment Top, Single or Lower Oven KESO-140/145, KEDO-245
18	CC-31863	Compartment Top, Lower Oven KEDO-240
19	CC-32191	Compartment Top, Single or Lower Oven KESO-170/175, KEDO-275
20	CC-31864	Compartment Top, Lower Oven KEDO-275
21	305091	Knob, Latch Lever
22		Latch Assembly (See Page 8)
23	CC-889051	Insulation, Rear KESO-140/145, KEDO-240/245
24	CC-889052	Insulation, Rear KESO-170/175, KEDO-270/275
25	CC-20019	Rear Anchor
26	305248-2	Cabinet Side - Lower Oven KEDO-240
27	305248-3	Cabinet Side - Lower Oven KEDO-245
28	305248-5	Cabinet Side - Lower Oven KEDO-270
29	305248-6	Cabinet Side - Lower Oven KEDO-275
30	CC-20049	Upper Oven Support KEDO-240/245
31	CC-20050	Upper Oven Support KEDO-270/275
32	CC-32307	Front Frame Support
33	CC-71633	Collector Box
34	CC-32424	Compartment Vent Duct KEDO-245/275
35	305239-2	Front Frame - Upper Oven KEDO-240/245
36	305239-1	Front Frame - Upper Oven KEDO-270/275
37		Oven Liners, Single or Upper Oven (See Page 10)
38	CC-31733	Control Frame Support KESO-140/145, KEDO-240/245
39	CC-31734	Control Frame Support KESO-170/175, KEDO-270/275
40	CC-32192	Compartment Top - Upper Oven KEDO-240/245
41	CC-32191	Compartment Top - Upper Oven KEDO-270/275
42	CC-31866	Vent Box
43	CC-32223	Heat Shield KESO-140/145
44	CC-32224	Heat Shield KESO-170/175
45	CC-32207	Heat Shield KESO-140/145, KEDO-240/245
46	CC-32206	Heat Shield KESO-170/175, KEDO-270/275
47	CC-32210	Heat Shield Panel KESO-140/145, KEDO-240/245
48	CC-32209	Heat Shield Panel KESO-170/175, KEDO-270/275
49	CC-70863	Vent Tube, Single or Upper Oven
50	305248-1	Cabinet Side, Single or Upper Oven KESO-140/145, KEDO-240/245
51	305248-4	Cabinet Side, Single or Upper Oven KESO-170/175, KEDO-270/275
52	CC-22045	Conduit Clamp
53	CC-32220	Vent Tube Mounting Bracket

54		Latch Assembly (See Page 8)
55	305351-1	Cabinet Side Extension
56	CC-32284	Vertical Air Duct KEDO-245/275
57	CC-22044	Cabinet Back KESO-140/145
58	CC-22126	Cabinet Back KESO-170/175
59	CC-22100	Cabinet Back KEDO-240/245
60	CC-22143	Cabinet Back KEDO-270/275
61	BL-2-7	Bulb, 40 Watt Appliance
62	CC-566083	Light Socket
63	CC-22022	Light Shield
64	CC-71041	RT Thermostat
65	305104	Rotisserie Motor KESO-145/175, KEDO-245/275
66	CC-19760	Rotisserie Motor Mounting Plate KESO-145/175, KEDO-245/275
67	CC-71196	Vent Tube, Lower Oven KEDO-240/245, KEDO-270/275
68	CC-31876	Vent Tube Retainer KEDO-240/245, KEDO-270/275
69	305028-1	Cabinet Support - Right, Single Oven KESO-140/145, KESO-170/175
70	305029-1	Cabinet Support - Right, Double Oven KEDO-240/245, KEDO-270/275
	*305028-2	Cabinet Support - Left, Single Oven KESO-140/145, KESO-170/175
	*305029-2	Cabinet Support - Left, Double Oven KEDO-240/245, KEDO-270/275
71	CC-71194	Spacer
72	CC-22058	Spring Anchor
73	CC-606517	Door Spring, Self-Cleaning Oven KESO-140/145/170/175, KEDO-240/245/270/275
74	CC-606518	Door Spring, Easy Clean Oven KEDO-240/270
75	CC-22049	Hinge Assembly
76	CC-22054	Cam Plate, Right
	*CC-22056	Cam Plate, Left
	*305135	Probe Cover
	*CC-604031	Screw, 8A x 3/8 PKESMS
	*305094-2	Front Frame, Single Oven KESO-140/145
	*305094-1	Front Frame, Single Oven KESO-170/175
	*305025-2	Air Duct - Right, Single or Upper Oven KESO-140/145/170/175 KEDO-240/245/270/275
	*305025-1	Air Duct - Left, Single or Upper Oven KESO-140/145/170/175, KEDO-240/245/270/275
	*305025-4	Air Duct - Right, Lower Oven KEDO-245/275
	*305025-3	Air Duct - Left, Lower Oven KEDO-245/275

*Part Not Illustrated.

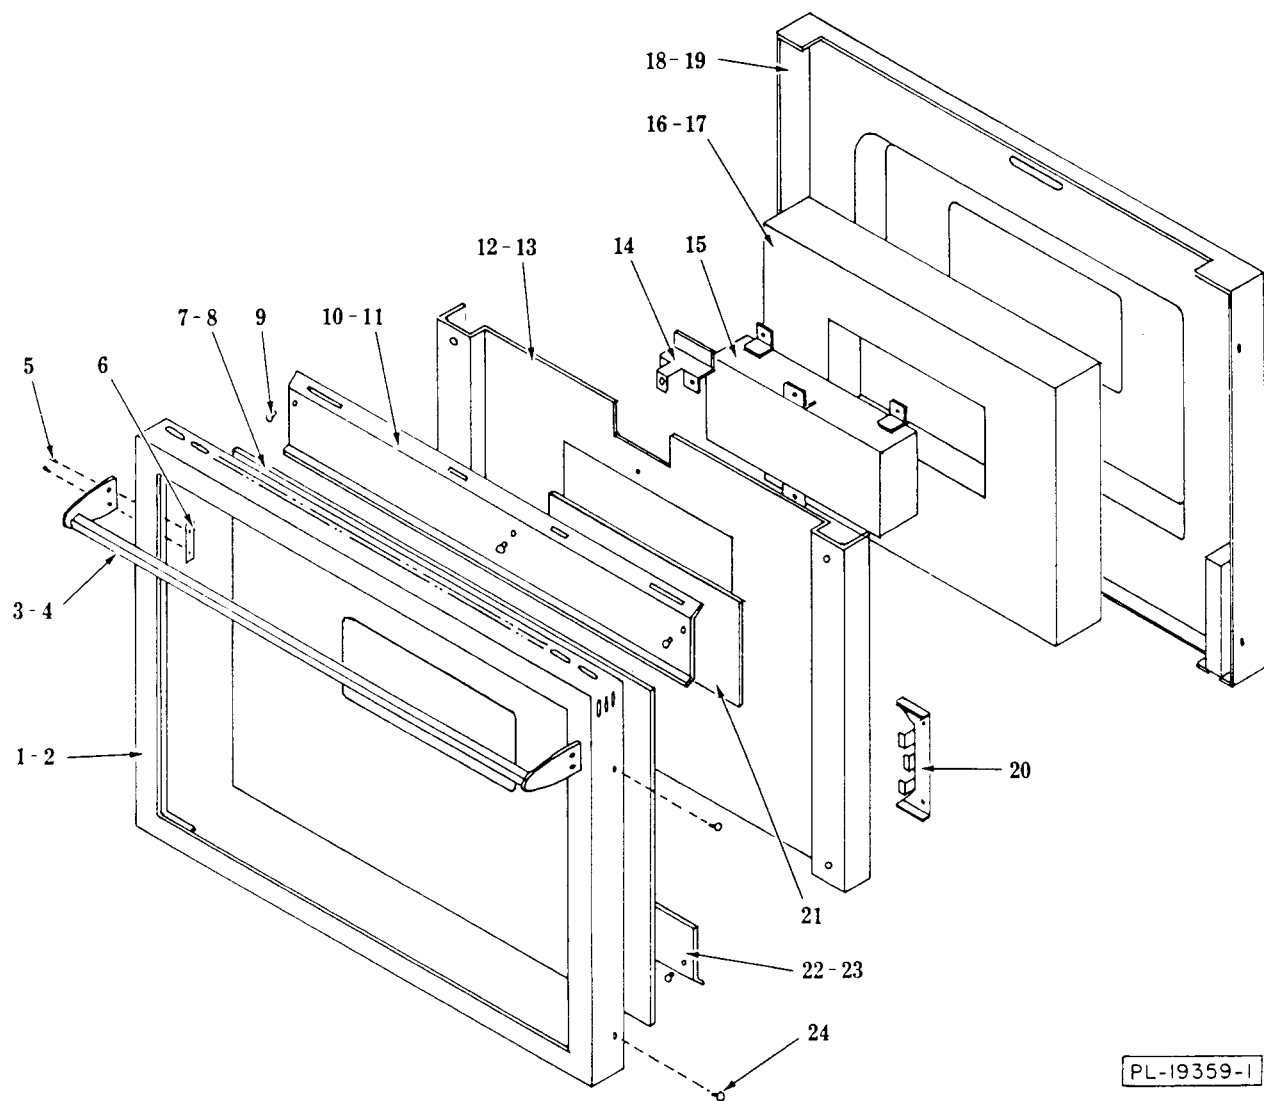

DOOR ASSEMBLY
(SELF-CLEAN OVEN)

1	305113-1	Door Frame KEDO-240
2	305113-2	Door Frame KEDO-270
3	305217-3	Door Handle KEDO-240
4	305217-4	Door Handle KEDO-270
5	SC-117-10	Screw - #8-32 x 3/8" PFHMS
6	CC-70677	Tinnerman
7	305130-1	Door Glass KEDO-240
8	305130-2	Door Glass KEDO-270
9	CC-590054	Rubber Bumper
10	305111-1	Insulation Retainer KEDO-240
11	305111-2	Insulation Retainer KEDO-270
12	305165-1	Window Pack
13	305336-1	Insulation KEDO-240
14	305336-2	Insulation KEDO-270
15	305108-3	Door Liner KEDO-240
16	305108-4	Door Liner KEDO-270
17	CC-604031	Screw - 8A x 3/8" PKESMS